6008805

## santa-sb# conf t

Enter configuration commands, one per line.
Edit with DELETE CTRL/W, CTRL/U; end with CTRL/Z interface serial 1 encapsulation ppp
^Z

santa-sb# sh int s 1

Serial 1 administratively down, line protocol is down Hardware is MCl Serial MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255 Encapsulation PPP, loopback not set, keepalive set (10 sec)

> Fig. 1 (Prior art)

RECEIVED OCT 1 4 1999

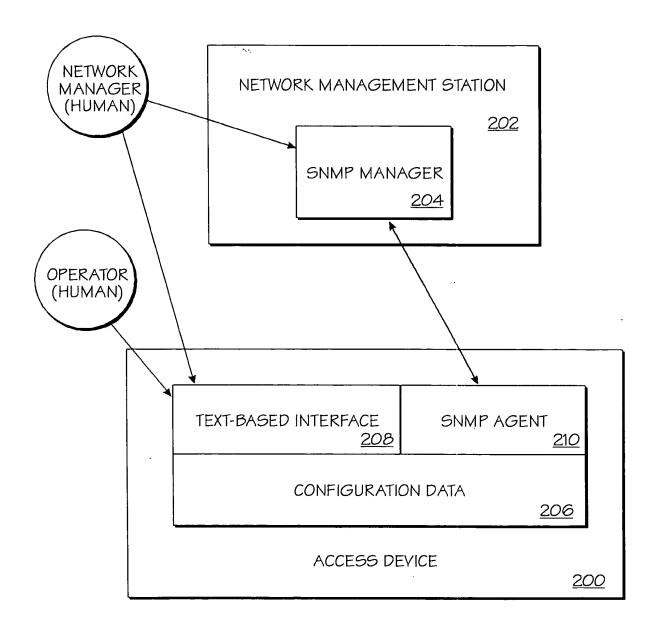


Fig. 2 (Prior art)


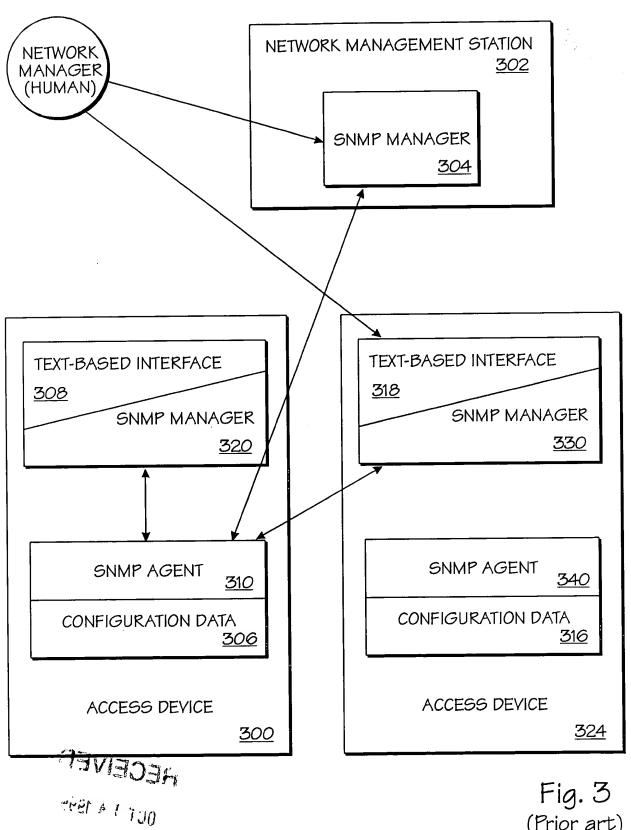


Fig. 3 (Prior art)

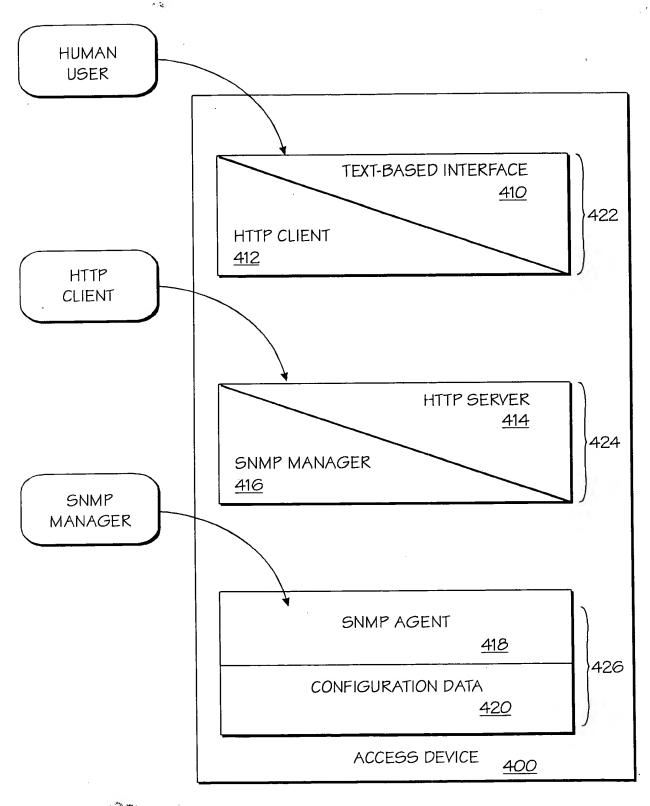

HECENEL 1999

Fig. 4

706 708 { 710 712 5.1 <filename>onfo.dat

1) frlportCnfEntry 8  $\mathcal{O}$ 7 g ဖ 9 5.2 <filename.defs <u>1</u>2 frLportCnfEntry frlportCnfEntry %ei frlportCnfEntry "frlportSlotIndex %er frlportSlotIndex 1 32 frlportClockType frlportCnfEntry.3 INTERGER frlportPortIndex frlportCnfEntry.1 INTERGER %ev frlportClockType %ev frlportClockType %er frlportPortIndex frlportPortIndex frlportCnfEntry.2 INTERGER read-only %ev frlportClockType %ev frlportOperStatus inActive frlportOperStatus frlportCnfEntry.4 INTERGER read-only mandatory 1.3.6.1.4.1.351.100.4.2.1.1.1 Aggregate not-accessible frl.portCnfTable. 1 Aggregate not-accessible mandatory normal 1 32 none looped Ø N read-only mandatory read-write frlportPortIndex" mandatory mandatory RECEIVED

%er frlportPolVerTmr %er frlportDescrip frLportCnfEntry.6 Ŋ 30 EXEMPLARY MIB TEXT FOR A FRAME-RELAY PORT Octetstring read-write mandatory

78

 $\vec{\omega}$ 

76

714

<u>13</u>

<u>Z</u>

%ev frlportOperStatus looped 3

9661 F T 130

%ev frlportOperStatus active 2

%ev frlportOperStatus failed 4

frlportPolVerTmr frlportCnfEntry.5 INTERGER read-write mandatory

ত্র <u>ಹ</u>

80Ö {

